

Table 4-3 – Flashhead Major Replaceable Parts (FH 308)

Reference	Description	Part Number
FT101	Flashtube	8384329
P1,P2,P3	Ceramic Spacer, ½" diameter, short	5900842
RC101	R.C. Network	1403411
RC102	R.C. Network	1403412
T101	Transformer, Trigger	8288201
T102	Transformer, Coupling	8336701
	Flashtube Mounting Assembly Plate	8905338



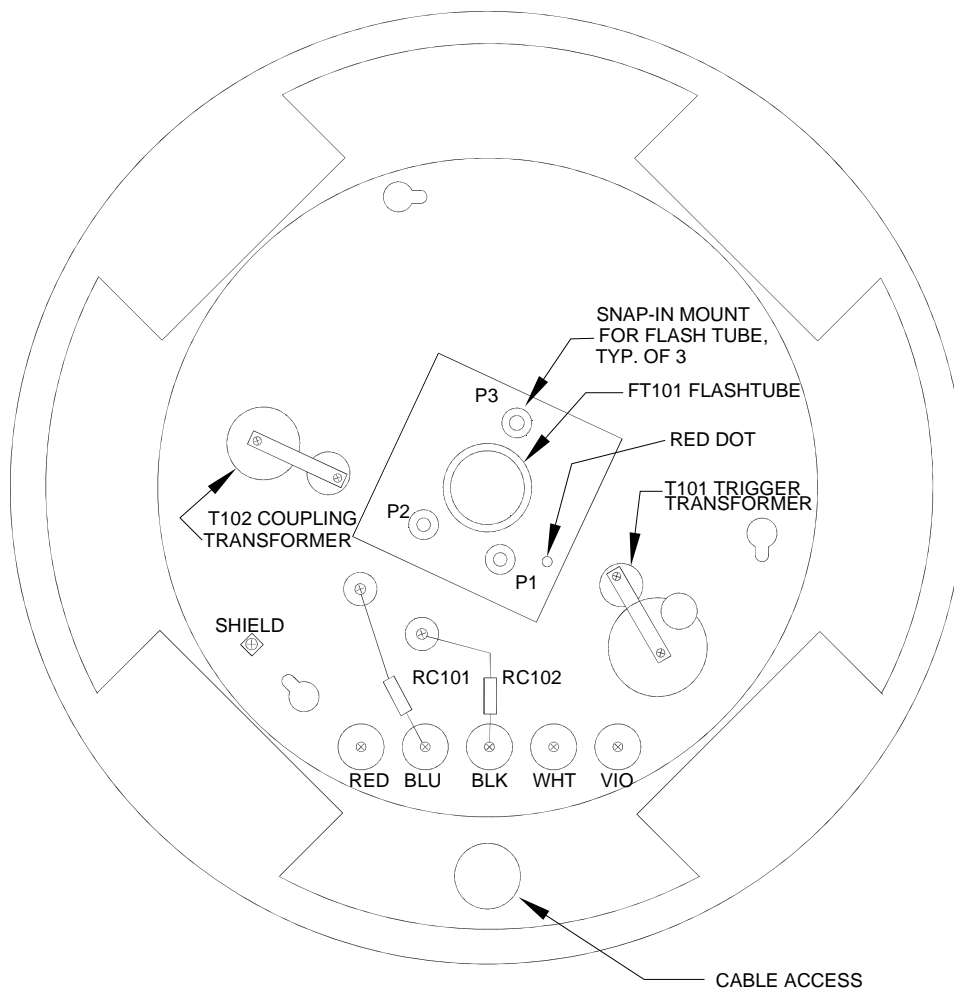


Table 4-4 – Flashhead Major Replaceable Parts (FH 324W)

Reference	Description	Part Number
FT101&102	Flashtube (Upper and Lower)	8384329
P1, P2, P4, P5,	Ceramic Spacer, 3/4" diameter	5900844
P3, P6, P7,P8, P11	Ceramic Spacer, 1/2" diameter, short	5900842
RC101	R.C. Network	1403411
RC102	R.C. Network	1403412
T101	Transformer, Trigger	8288201
T102	Transformer, Coupling	8336701
	Flashtube Mounting Assembly Plate (Lower)	8905338
	Flashtube Mounting Assembly Plate (Upper)	8905341

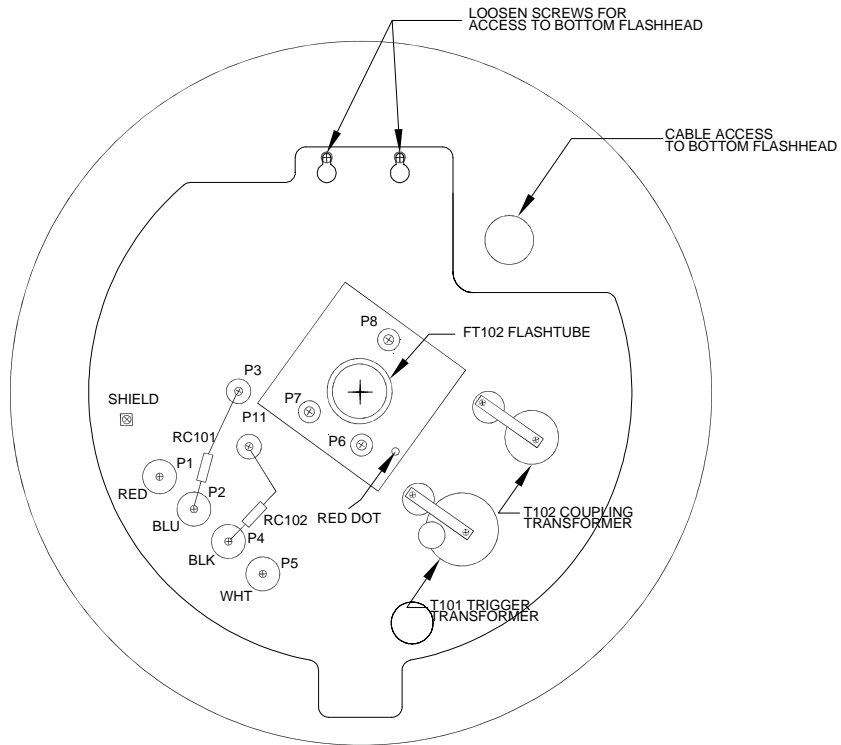

FH 324W Primary(Upper) Flashhead Component Location

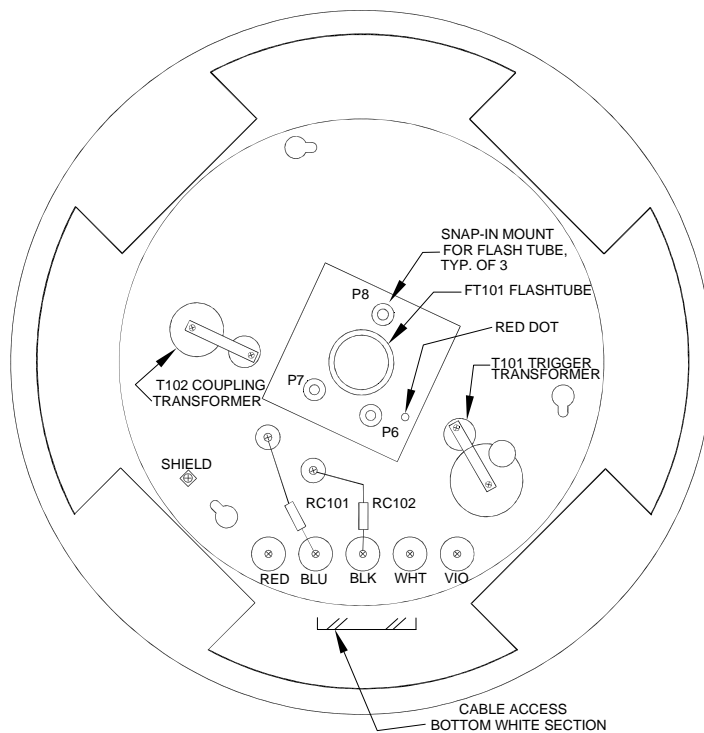

FH 324W Backup (Lower) Flashhead Component Location